

In this tutorial, you will learn about the more advanced features and buttons on your Digital Remote.

SETTINGS: For Custom Settings

Press **SETTINGS** on your Digital Remote to bring up the **Quick Settings** menu. From here, you can set Parental Controls, Record a show, and more.

GUIDE: The Navigator Interactive On-Screen Guide

Press **GUIDE** to display the **Navigator Interactive On-Screen Guide** on your screen. Here you can get detailed program information, and programs on other channels.

UP, DOWN, LEFT, RIGHT: Moving Around the Screen

Use the arrows to scroll through the various choices in the on-screen menus and displays.

For example: Use the **UP** and **DOWN** arrows to scroll through channels in the **Navigator Interactive On-Screen Guide** and use the **LEFT** or **RIGHT** arrows to scroll through the times of day in a channel.

SELECT: Making Choices

SELECT allows you to select whatever choice you've highlighted on screen. For example: When you find a show you want to see in the **Navigator Interactive On-Screen Guide** press **SELECT** to go to that show.

INFO: Getting Information

Use **INFO** to get more information about whatever you're watching. For example: When you are watching a show, you can press **INFO** to get more information about the show. This gives you information such as the channel number, the name of the show, start and end times and the time of the day.

Press **INFO** again to get more detailed information.

OR

When you are in the **General Settings** menu, you can press **INFO** to get more information about the setting you've highlighted.

PAGE+/-: Scrolling Faster

If you want to scroll up and down faster, you can press **PAGE+/-**.

For example: If you are in the **PROGRAM GUIDE**, this button will let you jump one page at a time, rather than channel by channel. You can also use this button when an on-screen menu prompts you to scroll through pages.

EXIT:

At any time, when you are in an on-screen menu, you can press **EXIT** to clear the screen and return to your show.

A, B & C: Special Functions

A, B and **C** allow you to do different functions at different times.

You will be told when to press these buttons in your on-screen menu and what they will do.

For example: When you are checking the **Navigator Interactive On-Screen Guide** you can use these buttons as follows:

- Press **A** to browse by Title.
- Press **B** to browse by Theme.
- Press **C** to browse by Time.

— continued —

— continued —

FAV:
Finding Favorite Channels

Press **FAV** to jump through your favorite channels. You have to program your Favorite Channels in advance for this to work. (View the **Custom Settings: Favorite Channels** tutorial to learn how.)

The VCR Buttons:
Pause, Fast Forward, Rewind, Stop & Record

Your Digital Remote is a Universal remote that can control equipment like your VCR without the hassle of separate remotes.

1. Your Bright House Networks installer may have already programmed your Digital Remote for your VCR. If this is not set up, view the **Programming Your Digital Remote** tutorial for more information.
2. Once this is set up, you can use your remote to pause, fast forward, rewind, stop or record programs just like you're used to.

VCR/VOD Switch:

PAUSE, FAST FORWARD, REWIND and **STOP** may also be used with iCONTROL on demand programs.

You must set your Digital Remote properly to either **VCR** or **VOD** (video on demand) depending on which one you want to use.

- For VCR functionality, set the **VCR/VOD** switch to **VCR**.
- For VOD functionality, set the **VCR/VOD** switch to **VOD**.

Note: Some Digital Remotes have a switch, others a button. If your Digital Remote has neither, don't worry, you don't have to do anything. It will work automatically.